



Digital Hand-held "Pocket" Snow-melting agent De-icing fluid Refractometer

For concentration checks of
Snow-melting agent
for airport runways and roads!



Purpose of Use



- Highway management office
- Airport management and operation office
- Road maintenance department in local authority

How to Measure



Place the sample onto the prism surface.

Press the START key.

The measurement value will be displayed in 3 seconds.

Accessories



▲ PAL-STRAP
RE-39410



▲ PAL-CASE
RE-39409




▲ PAL Silicone Cover
RE-39413



PAL-03CS



▲ PAL-03CS
Cat.No.4393

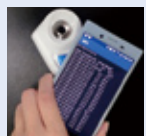

◀ PAL-41S
Cat.No.4441



◀ PAL-43S
Cat.No.4443

Specifications

	PAL-03CS		PAL-41S	PAL-43S
	Sodium Chloride	Freezing point	Calcium Chloride	Magnesium Chloride
Measurement Range	0.0 to 28.0% (g/100g)	0 to -22°C	0.0 to 35.0% (g/100g)	0.0 to 30.0% (g/100g)
Resolution	0.1%	1°C	Temperature 10.0 to 40.0°C	0.1%
Measurement Accuracy	±0.2%	±1°C	Temperature 0.1°C	±0.2%
Measurement Temperature	Temperature ±1°C			
Ambient Temperature	10 to 40°C (ATC*)			
Sample Volume	0.3mL or more			
Measurement Time	3 seconds			
Power Supply	2 alkaline batteries			
Battery Life	Approx. 11,000 measurements (Using a new alkaline battery)			
International Protection Class	IP 65 Water Resistant			
Dimensions and Weight	5.5(W)×3.1(D)×10.9(H) cm, 100g (Main unit only)			

*Automatic Temperature Compensation

All ATAGO products are designed and manufactured in Japan.



<http://www.atago.net/> overseas@atago.net

Headquarters: The Front Tower Shiba Koen, 23rd Floor
2-6-3 Shiba-koen, Minato-ku, Tokyo 105-0011, Japan
TEL : 81-3-3431-1943 FAX : 81-3-3431-1945



ATAGO products comply with HACCP, GMP, and GLP system standards.

- ATAGO U.S.A., Inc.
- ATAGO INDIA Instruments Pvt. Ltd.
- ATAGO THAILAND Co., Ltd.
- ATAGO BRASIL Ltda.
- ATAGO ITALIA S. r. l.
- ATAGO CHINA Guangzhou Co., Ltd.
- ATAGO RUSSIA Ltd.
- ATAGO NIGERIA Scientific Co., Ltd.

- TEL : 1-425-637-2107 customerservice@atago-usa.com
- TEL : 91-22-28544915, 40713232 customerservice@atago-india.com
- TEL : 66-21948727-9 customerservice@atago-thailand.com
- TEL : 55 16 3913-8400 customerservice@atago-brasil.com
- TEL : 39 02 36557267 customerservice@atago-italia.com
- TEL : 86-20-38108256 info@atago-china.com
- TEL : 7-812-777-96-96 info@atago-russia.com
- TEL : 234-707-558-1552 atagonigeria@atago.net

* Specifications and appearance are subject to change without notice.

Copyright © 2017 ATAGO CO., LTD. All rights reserved. [ENV.04] 1710K Printed in Japan